
# ASSEMBLY INSTRUCTIONS METAL POINT 2 SHELVING

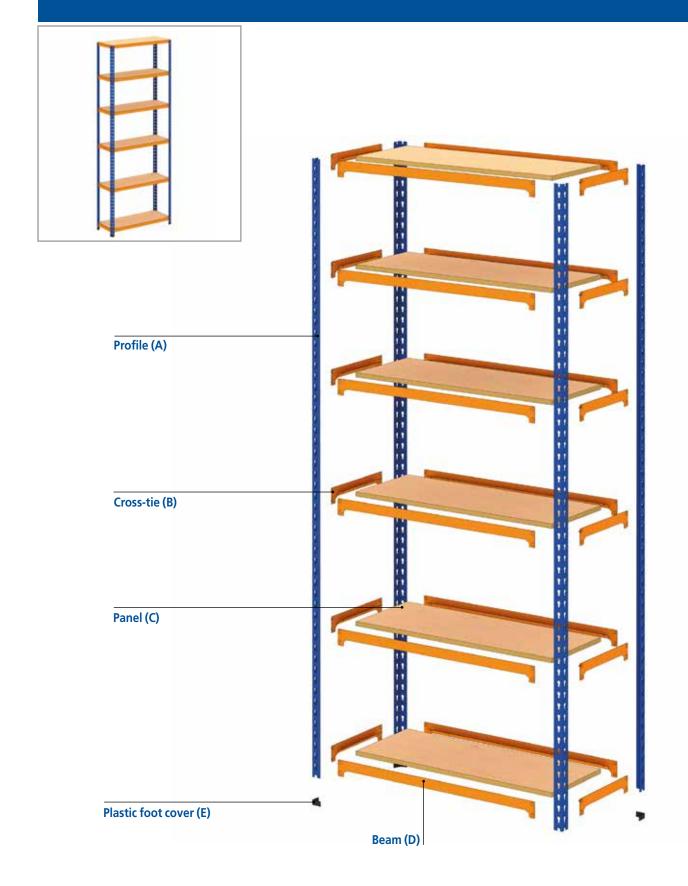





### Assembly of the structure




Firstly, place the plastic foot cover (E) on the bottom of each profile (A).

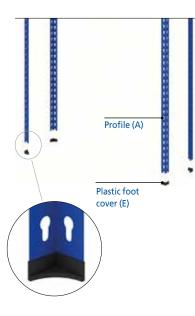

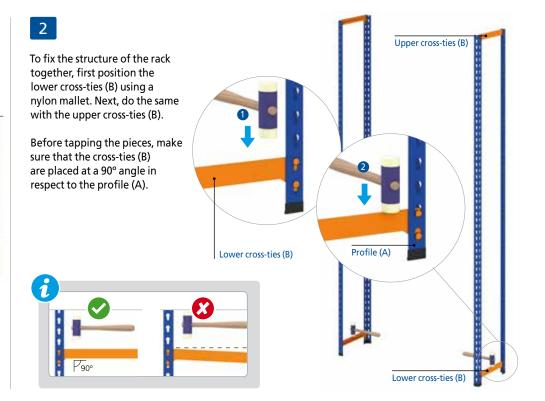


#### 3

Once installed, place the four remaining levels of cross-ties (B).

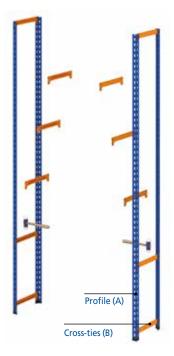

## 4

Next, fix the beams (D) of the lower level like the cross-ties were (B), and check they are positioned at the same level.

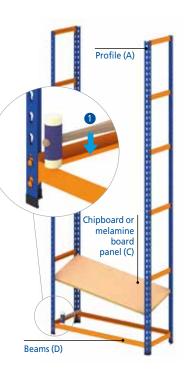

## 5

Before placing all the beams, insert the shelf (C). Then, mount the next level and, so forth, from bottom to top.

